Schaltplan »TEAM 50 RC«

Ident.-Nr. 1574900

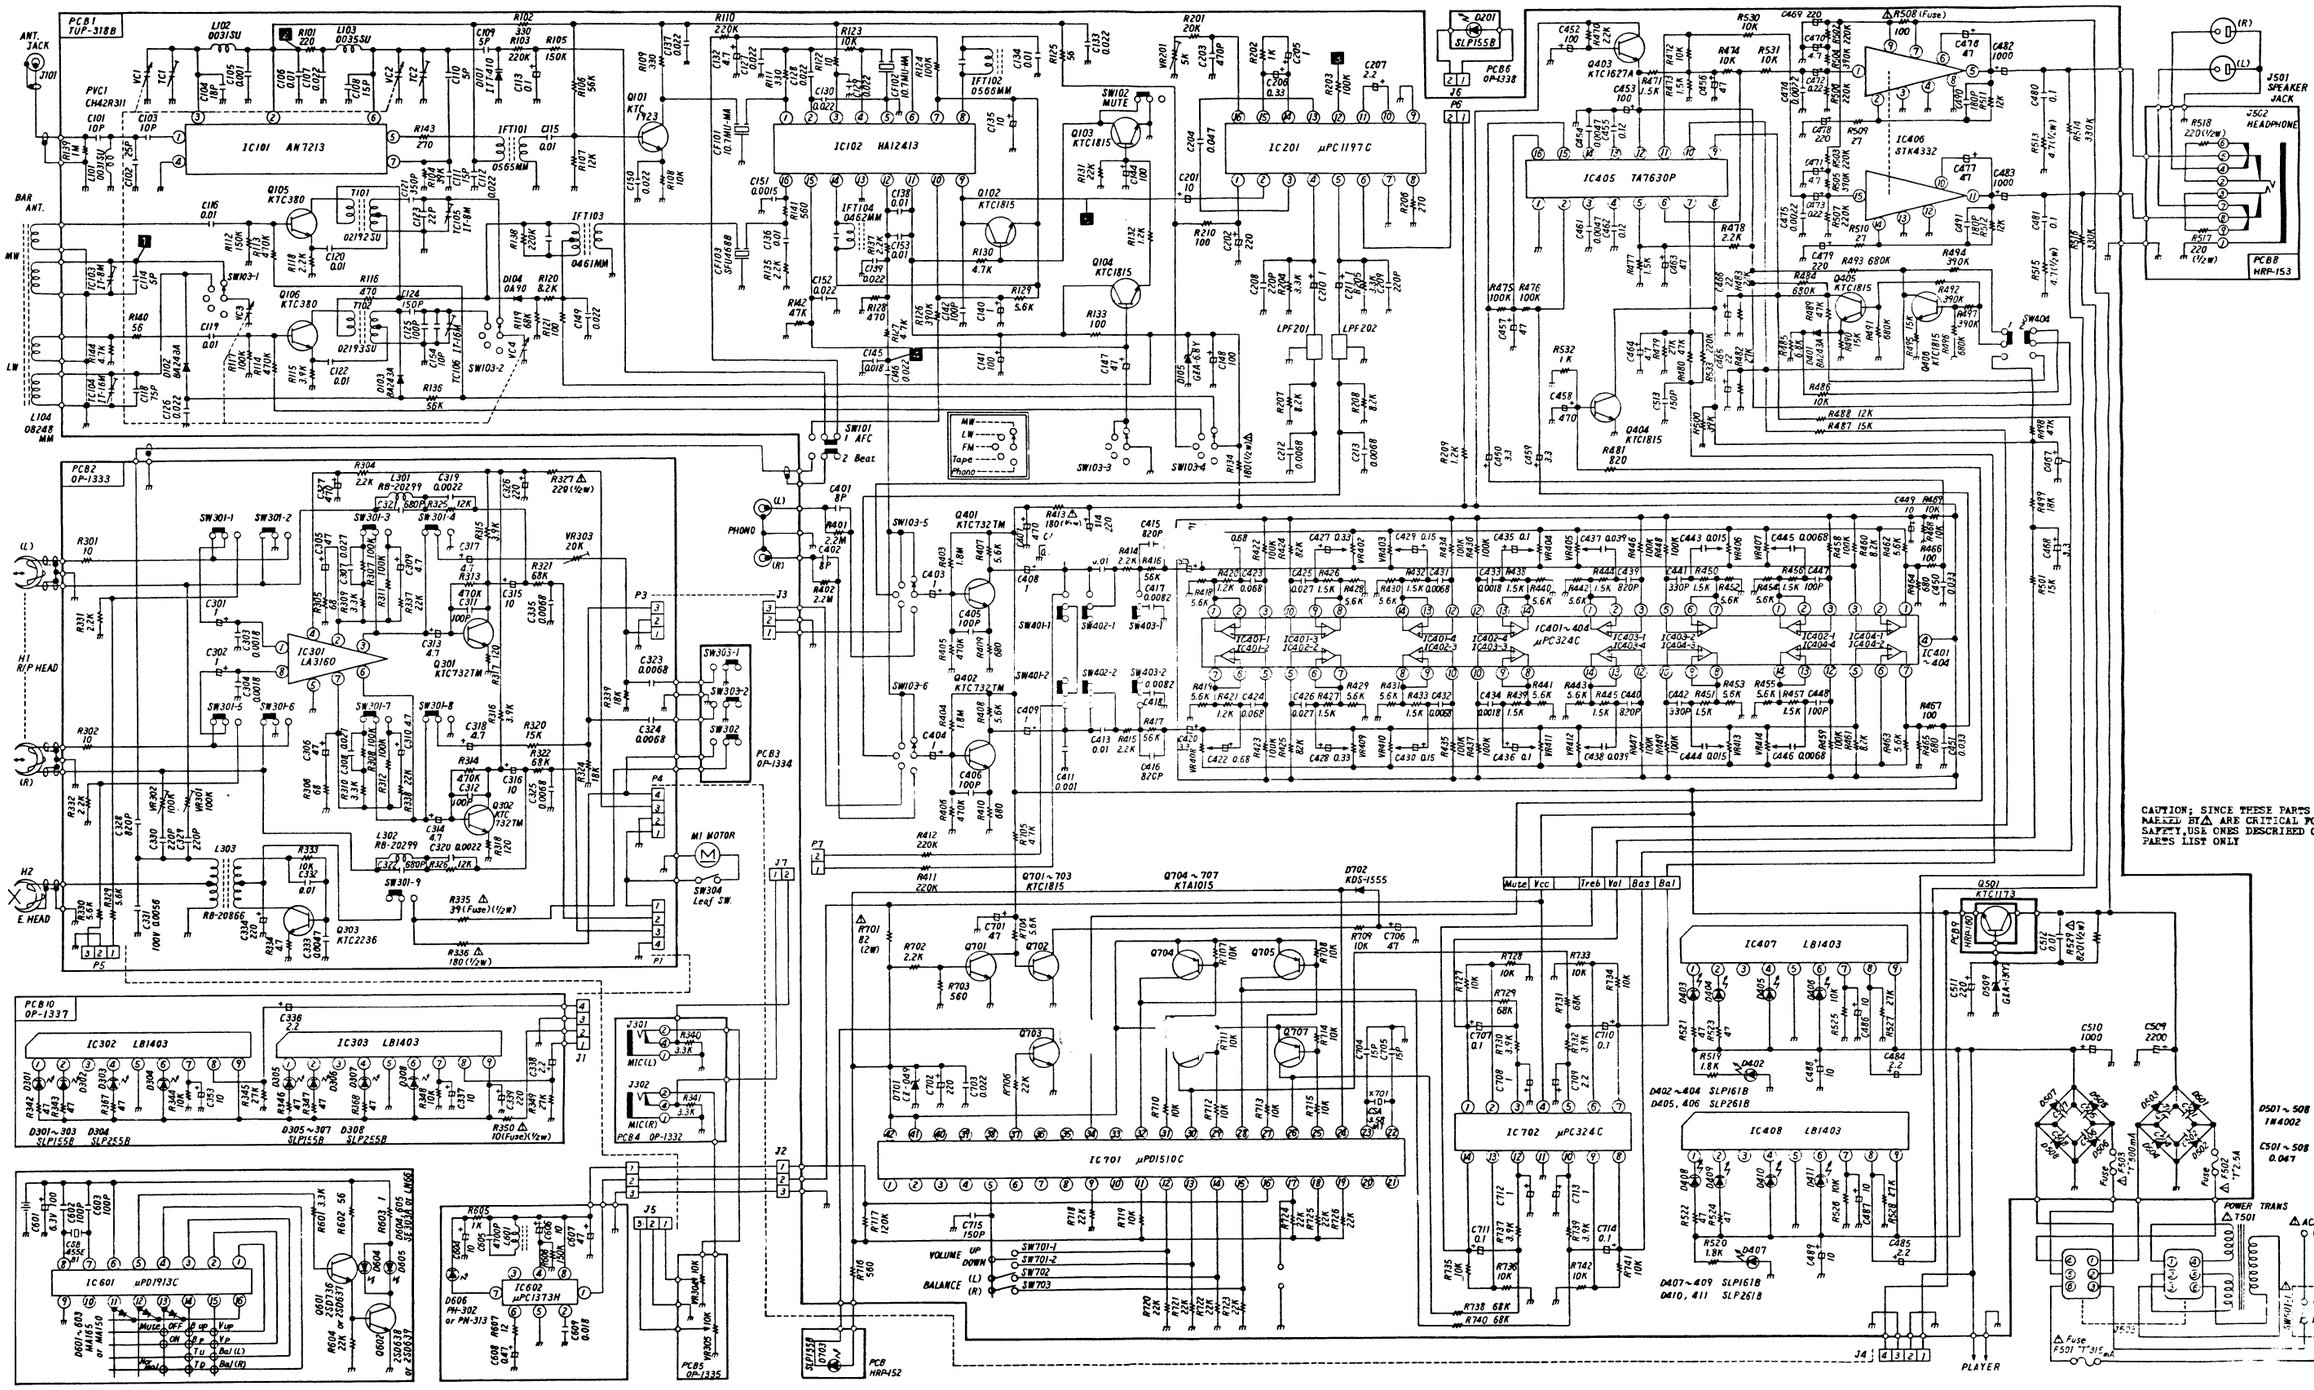
PCB1 TUF-3188
IC101 AN7213
IC102 HA12413
IC201 μPC1197C
IC405 TA7630P
IC406 STK4332
IC301 LA3160
IC401~404 μPC324C
IC701 μPD1510C
IC702 μPC324C
IC601 μPD1913C
IC602 μPC1373H
IC302 LB1403
IC303 LB1403
IC407 LB1403
IC408 LB1403
Q101 KTC1Y23
Q102 KTC1815
Q103 KTC1815
Q104 KTC1815
Q105 KTC380
Q106 KTC380
Q201 SLP155B
Q301 KTC7327M
Q302 KTC7327M
Q303 KTC2236
Q401 KTC732TM
Q402 KTC732TM
Q403 KTC1627A
Q404 KTC1815
Q405 KTC1815
Q501 KTC1173
Q601~603 MA150 or MA165
Q604 2SD738 or 2SD637
Q605 2SA638 or 2SA637
Q701~703 KTC1815
Q704~707 KTA1015
D702 KDS-1555
D601~603 SLP155B
D604~605 SLP255B
D301~303 SLP155B
D304 SLP255B
D305~307 SLP155B
D308 SLP255B
D402~404 SLP161B
D405, 406 SLP261B
D407~409 SLP161B
D410, 411 SLP261B
D501~508 1N4002
C501~508 0.047
PCB2 OP-1333
PCB3 OP-1334
PCB4 OP-1332
PCB5 OP-1335
PCB6 OP-1338
PCB8 HRP-153
PCB9 HRH-180
PCB10 OP-1337
PCB HRP-152
L102 0.031SU
L103 0.035SU
L104 0.82μH MM
L301 RB-20299
L302 RB-20299
L303 RB-20866
T101 0.219.2SU
T102 0.219.3SU
IFT101 0565MM
IFT102 0565MM
IFT103 0461MM
IFT104 0462MM
IFT105 17-9M
IFT106 17-10M
SW101 1 AFC 2 Beat
SW102 MUTE
SW103-1
SW103-2
SW103-3
SW103-4
SW103-5
SW103-6
SW301-1
SW301-2
SW301-3
SW301-4
SW301-5
SW301-6
SW301-7
SW301-8
SW301-9
SW302
SW303-1
SW303-2
SW304 Leaf SW
SW401-1
SW401-2
SW402-1
SW402-2
SW403-1
SW403-2
SW404
SW701-1 VOLUME UP
SW701-2 DOWN
SW702 BALANCE (L)
SW703 (R)
M1 MOTOR
P1
P2
P3
P4
P5
P6
P7
J1
J2
J3
J4
J5
J6
J7
J301 MIC(L)
J302 MIC(R)
J501 SPEAKER JACK
J502 HEADPHONE
LPF201
LPF202
PHONO
PLAYER
POWER TRANS T501
F501 T315mA
F502 T2.5A
F503 T1500mA
Mute Vcc Treb Vol Bas Bal
Tape
Phono
CAUTION; SINCE THESE PARTS MARKED WITH △ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED ON PARTS LIST ONLY